

LA14, LA25, LA36, LA37

| | LA12 | LA23 | LA35 | Basic | | | | LIN bus |
|--------------------------|------|------|------|-------|----------|----------|------|---------|
| | | | | Basic | Advanced | Parallel | | |
| Control | | | | | | | | |
| 12V, 24V supply | √ | √ | √ | √ | √ | √ | √ | |
| H-bridge | √ | √ | √ | √ | √ | √ | √ | |
| Manual drive in/out | √ | √ | √ | √ | √ | √ | √ | |
| EOS in/out | √ | √ | √ | - | √ | √ | √ | |
| Soft start/stop | - | - | - | √ | √ | √ | √ | |
| Feedback | | | | | | | | |
| Voltage | √ | √ | √ | √ | √* | - | - | |
| Current | - | - | - | - | √** | - | - | |
| Single Hall | √ | √ | √ | √ | √ | - | - | |
| PWM | - | √ | - | - | √ | - | - | |
| Position (mm) | - | - | - | - | - | - | √ | |
| Custom feedback type | - | - | - | - | √ | - | - | |
| Monitoring | | | | | | | | |
| Temperature monitoring | √ | √ | √ | √ | √ | √ | √ | |
| Current cut-off | √ | √ | √ | √ | √ | √ | √ | |
| Ready signal | √ | - | √ | - | - | - | - | |
| BusLink <…> | | | | | | | | |
| Service counter | - | - | - | - | √ | √ | √ | |
| Custom soft start/stop | - | - | - | - | √*** | √*** | √*** | |
| Custom current limit | - | - | - | - | √ | √ | √ | |
| Speed setting | - | - | - | - | √ | √ | √ | |
| Virtual end stop | - | - | - | - | √ | √ | √ | |

* Configure any high/low combination between 0 - 10V

** Configure any high/low combination between 4 - 20mA

*** Configure any value between 0 - 30s